

# How to Calibrate the Sympodium Pen Using SMART Board Tools


**Step1:** The SMART Board tools window should open automatically when you log in. In case its not opened you can find it in.

Start → All Programs → Startup → SMART Board Tools



**Step2:** Click on the Control Panel button on the SMART Board tools Window.

**Step3:** A new window will open. Click on the Orient/Align the SMART Board button.

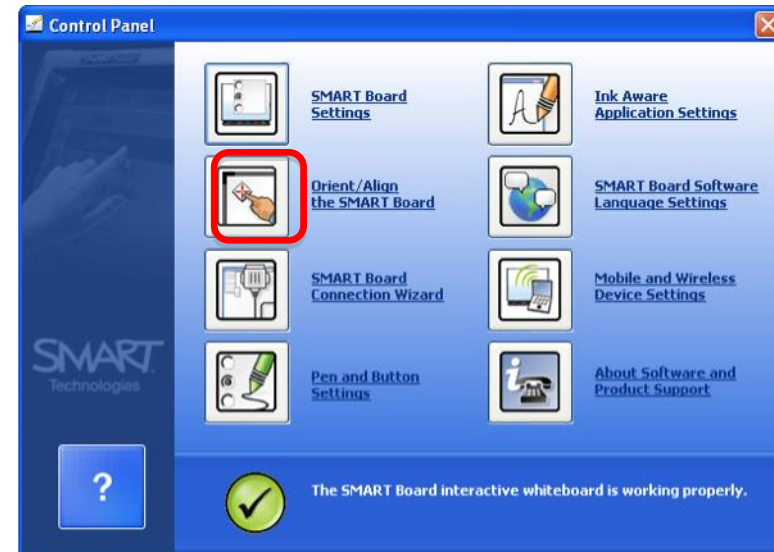

**Step2**



**Step4:** In the next screen you will be asked to use the pen and click on the target. Once you click all the targets you will be ready to use the pen.

